


Quickstart guide SRT334i2

SRT3340200A06_QG_EN_STD

Turn on/off

Before attempting to turn the device on, make sure it is connected to a power outlet. Then press and hold the On/Off button for at least 5 seconds until one or several status LEDs turn on.

To turn off the device press and hold the On/Off button until all status LEDs turn off.

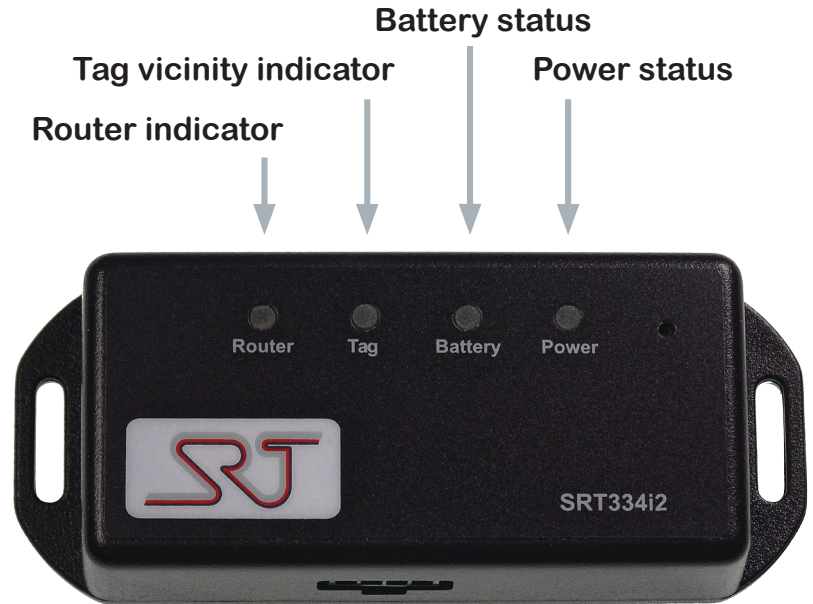

Status LEDs

Power status LED

Solid


Power is connected.

Blinking

The device is not receiving power.

No light

The device is turned off.

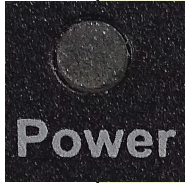

Battery status LED

Solid


The battery is charged.

Blinking

The battery level is low.

No light

The device is turned off.

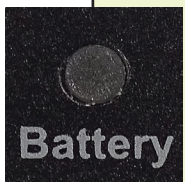

Status LEDs

Tag vicinity indicator LED

Solid

The device is not within the transmission range of another tag.

Blinking

The device is within the transmission range of another tag.

No light

The device is turned off.



Router indicator LED

Solid

The device is not in connection with any other router and/or gateway.

Blinking

The device is directly or indirectly (through other routers) connected to a gateway.

No light

The device is turned off.

