 





Quickguide

SRT406 / SRT406i

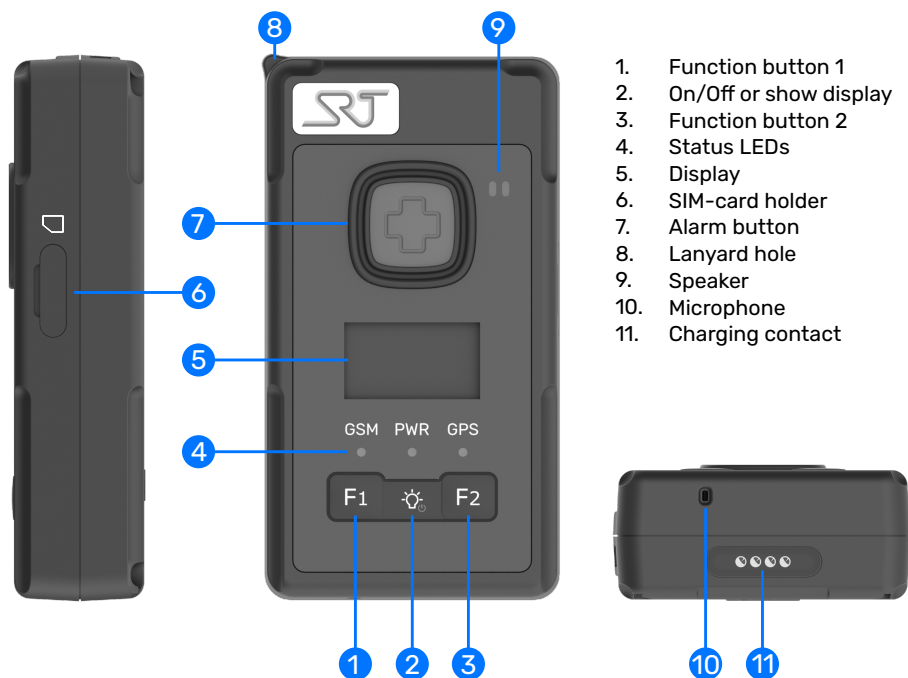

Installing the SIM-card

 Open the small hatch on the side and slide the SIM-card into the holder. The cut corner should be placed inward left. See picture.

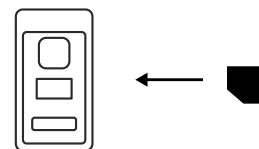

Charging status

 
A new device must be charged before first use. Approximately 4 hours to fully charge the battery.

PWR status LED (during charging)

Blinking green: Device is on and charging.
 Solid green: Device is on and fully charged.



Blinking red: Device is off and charging
 Solid red: Device is off and fully charged



While the device is turning off the PWR LED is alternating green and red.

Alarm button and function buttons

To send an Alarm, press the Alarm button and hold until the device vibrates. Function buttons F1 and F2 can be configured to manage a set of different functions such as Man down, timer alarm or establishing a voice call to a predefined set of numbers. If you are unsure how the device is configured please contact your retailer.

Status LEDs

GSM LED

Slow blink: logged on to Mobile Network
 Fast blink: call in progress



GPS LED

Blinking: GPS module on and positioned



PWR LED (when not charging)

 
The PWR LED indicates the battery level through three blinks in a row.

- 3 green: Battery level excellent
- 2 green and 1 red: Battery level good
- 1 green and 2 red: Battery level poor
- 3 red: battery level critical



Display

To light the display simply press the on/off-button once. The display then shows actual status.



Turning on and off the device

To turn on or off the device simply press and hold the on/off-button for at least 5 seconds.

Acoustic Warning

The device will emit an acoustic warning if the SIM-card is missing or not inserted correctly.